



Installation

Use an elbow piece for large bends.

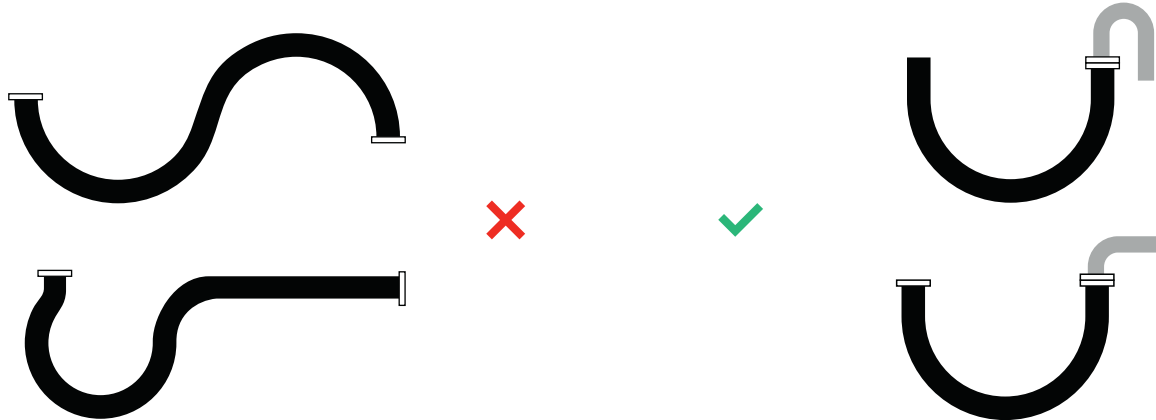

Avoid kinking and sharp turns behind a coupling.

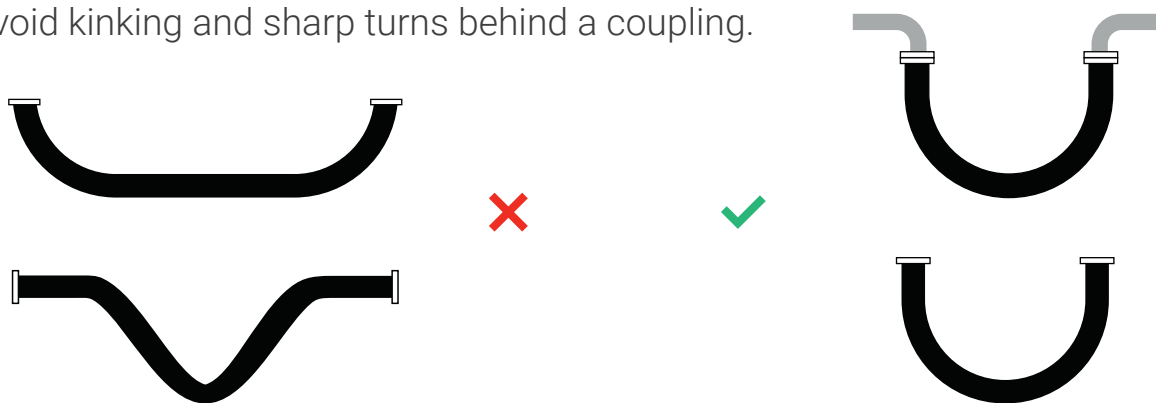

Avoid additional load. The length of the hose should be long enough.



Always install the hose so that the flexing takes place in only one plane. This plane must be the plane in which the bending occurs.

